

**Roadtrek**<sup>TM</sup>

by **Home & Park**<sup>TM</sup>  
Motorhomes

**OWNER'S MANUAL  
AND WARRANTY**



**ROADTREK**  
**OWNER'S MANUAL AND WARRANTY**

Revised: Nov 24 88

© HANMAR MOTOR CORPORATION 1988.

TM "Home & Park" and "Roadtrek" are registered trademarks of J.J.Hanemaayer and J.N.Hanemaayer of which Hanmar Motor Corporation is a licensee.



## **A WORD TO ROADTREK OWNERS...**

This manual has been prepared to acquaint you with the operation, maintenance and warranties of your new Roadtrek Motorhome Van. Your unit has been designed, engineered and manufactured to provide you with the utmost in pleasure, dependability and quality. It is important that you read the contents of this manual, that of the Chrysler chassis and those of other components and follow the instructions and recommendations contained in each to help assure the most enjoyable and trouble free operation of your unit.

We would like to take this opportunity to thank you for selecting a Home & Park product -- and assure you of our continuing commitment to your recreational vehicle pleasure and satisfaction.

## **INTRODUCTION**

This manual has been written to provide you with the information required to properly operate and maintain your new Roadtrek. After reading this manual, be sure to keep it in your unit as a reference. Your Home & Park dealer will be glad to answer any further questions about the operation of your unit.

## **IMPORTANT**

Every reasonable precaution has been undertaken in the preparation of this manual resulting in the utmost accuracy possible at the time of publication. However, due to the continuing improvement and refinement of our products and normal changes in information and procedures, Home & Park shall assume no responsibility whatsoever for errors or omissions in the manual's contents.

Further, Home & Park shall not be held liable or assume any obligations or responsibilities whatsoever for any loss, damage or injury directly or indirectly caused by, arising or resulting from, or as a consequence of the use or non-use of the information contained herein or the operation or non-operation of any items mentioned herein. And finally, Home & Park shall be indemnified and saved harmless from all losses, expenses, claims and demands whatsoever.



## **TABLE OF CONTENTS**

A.0.	DAILY LIVING.....	1
A.1.	Captain's Seats	
A.2.	Cloverleaf Dining Table	
A.3.	Exterior Utility Door	
A.4.	Under Floor Storage Compartment	
A.5.	Rear Storage Trunk	
B.0.	SLEEPING FACILITIES.....	2
B.1.	Rear Double Bed	
B.2.	Rear Twin Beds	
B.3.	Rear King Size Bed	
B.4.	Front Lounge Seats	
C.0.	APPLIANCES.....	3
D.0.	WASHROOM/PRIVACY AREA.....	4
D.1.	Privacy Doors (Versatile or Independent models)	
D.2.	Privacy Doors (Popular model)	
D.3.	Toilet	
D.4.	Shower/Wardrobe	
E.0.	POTABLE WATER SYSTEM.....	5
E.1.	Fresh Water Tank(s)	
E.2.	City Water Connection	
E.3.	Waste Water Storage and Dumping System	
E.4.	Water System Draining	
E.5.	Potable Water System Sanitizing	
E.6.	Winter Use	
F.0.	ELECTRICAL SYSTEM.....	7
F.1.	110/12V Converter/Charger	
F.2.	City Electrical Connection	
F.3.	Auxiliary Battery	
F.4.	Monitor Panel	
G.0.	LP GAS AND SAFETY SYSTEM.....	9
G.1.	Appliances	
G.2.	Refueling Procedures	
G.3.	Regulator	
G.4.	Smoke Detector	
H.0.	WINTER STORAGE.....	10
H.1.	Inside Your Unit	
H.2.	Outside Your Unit	
H.3.	Spring Start Up	
I.0.	WARRANTY.....	11
I.1.	Definitions	
I.2.	Automotive Warranty	
I.3.	Appliance Warranty	
I.4.	Home & Park Motorhome Warranty	
I.5.	Conditions	
I.6.	Owner Responsibility	
J.0.	EMERGENCY PHONE NUMBERS.....	13
K.0.	ADDRESS, PHONE AND FACSIMILE NUMBERS.....	13



## **A.0. DAILY LIVING**

### **A.1. CAPTAIN'S SEATS**

#### **a. Reclining**

To recline, pull up the recline control located on the lower right side of the seat and lean back.

#### **b. Sliding**

To slide, pull the slide control located on the left underside of the seat outward and slide the seat either forward or back.

#### **c. Swiveling**

To swivel the seats from a forward facing position to a rearward facing position, be aware of the following:

Ensure that the back of the seat is reclined as far forward as the recline control allows. Slide the seat back far enough to allow clearance of the engine cover but not so far as to lose clearance of the door. Put the armrests down to allow clearance of the door handles and steering wheel.

The swivel control is located on the centre underside of the seat and locks the seat in a forward facing position. To release, pull the swivel control to the right and turn the seat inward. Swivel the seat to the desired position. Once completed, adjust the recline and slide controls as desired.

#### **d. Adjustable Lumbar Support**

To increase the lumbar support, turn the lumbar support control (located on the seat back at the base of the right armrest) clockwise. To reduce the support, turn the control counter-clockwise.

#### **e. Seat Belt Usage**

The driver and passenger captain's seats and the two seats immediately behind (either captain's seats or lounge seats) are designed to carry passengers while the unit is in motion and are equipped with seat belts installed for their protection. All passengers must be seated in these seats only with seat belts fastened while unit is in motion. All other seats are not to be occupied while unit is in motion.

The lap belts must be worn across the hips and not across the abdomen. Passengers must sit well back in the seat and in an upright position.

### **A.2. CLOVERLEAF DINING TABLE (optional)**

To use the "leaves", first pivot the table into the desired position. In a seated position, with one hand under the table, push the support device out toward you. Next, let the "leaf" fall. Now, push the support device back in to allow the "leaf" to be swung up parallel to the table surface. Finally, pull the support device back toward yourself (to support the extended leaf).

To return the "leaf" to its original position, follow these steps in reverse order.

2.

### A.3. EXTERIOR UTILITY DOOR

Most utilities are located behind the exterior utility door located on the lower roadside of your unit. Items behind this door include: the power cord storage compartment; LP gas fill, gauge, tank valve and regulator; and city water connection.

### A.4. UNDER FLOOR STORAGE COMPARTMENT

The under floor storage compartment is located beneath the floor at the rear side cargo door. Access is achieved by opening both cargo doors and then opening the compartment door.

### A.5. REAR STORAGE TRUNK (optional)

The rear storage trunk is located beneath the floor at the very rear of the unit. Access to this area is achieved by opening the rear door and then opening the trifold cover in the floor directly in front of the rear bumper.

The rear table leg can be positioned with the base at the front of the storage trunk (for easier access) or at the rear (for additional legroom at the dinette). To change the position of the leg, disengage the barrel bolt located on the underside of the table. Open the trifold cover and remove the leg. Reposition the leg as desired, engage the barrel bolt and close the trifold cover.

Caution should be taken so as to not damage the trunk when driving on rough terrain or through uneven driveway entrances.

## **B.0. SLEEPING FACILITIES**

### B.1. REAR DOUBLE BED (Versatile or Independent model)

To convert the dinette into a double bed, follow these steps. First, remove the table and legs from their receptacles and place the table on the lateral supports located on the upper edge of the seat base boxes. Second, starting on the left side, move the seat cushion to the right side. Third, pull the left back rest cushion inward and down until it lies flat. Fourth, push this cushion out against the interior wall of the unit. Fifth, move both seat cushions over to the left side and repeat the fourth step with the right back rest cushion. And finally, place the edges of the two seat cushions together and lay them flat.

To convert back to a dinette, perform these steps in reverse order.

### B.2. REAR TWIN BEDS (Popular model)

To convert the dinette into twin beds, follow these steps. First, remove the table and legs from their receptacles and place the table on the lateral supports located on the upper edge of the seat base boxes (to act as a night table) or store the table between the driver's seat and wardrobe. Second, place both back rest cushions vertically up against the seat base boxes (be careful not to block output from the furnace). Lastly, pull each seat cushion approximately 3" (8 cm) from the wall to provide additional elbow room while sleeping.

### **B.3. KING SIZE BED (Popular model)**

To convert the dinette into a king size bed, follow these steps. First, remove the privacy curtains from their velcro supports on the lower edges of the suspended cupboard and pantry. Second, remove the table and legs from their receptacles and place the table on the lateral supports of the seat base boxes as far to the front as the supports allow. Third, place the loose support board (located inside the curbside seat base box) on these same lateral supports as far to the rear as the supports allow. Fourth, place the seat back cushions and filler cushions on the floor temporarily. Fifth, remove the seat cushions from the unit, turn them around lengthwise and put them back into the unit. Sixth, place the back rest cushions against the walls and as far to the front as possible (below suspended cupboard and pantry). Seventh, place the filler cushions against the walls and as far to the rear as possible. And finally, place the inner edges of two seat cushions together and lay them flat.

To convert back, perform these steps in reverse order.

### **B.4. FRONT LOUNGE SEAT(S)**

To convert a lounge seat into a single bed, follow these steps. First, swivel the front captain's seat (see A.1.c.) so that it is facing outward towards the door (be sure both arm rests are in an upright position). Second, swing the back rest cushion upward, remove it from its support hook and place it flat on the seat cushion. Third, flip the flip over step into a flat position (for the passenger side lounge seat only). Fourth, lift up the seat cushion and pull forward until it is up against the swiveled captain's seat. Fifth, swing down the hinged support board (located on the galley partition). Sixth, place the back rest cushion with the lower edge against the seat cushion and the round knob (located on the back of the back rest) inside the seat base box and push flat.

To convert back to a lounge seat, perform these steps in reverse order. When placing the seat cushion back in place, be sure to slide it in all the way back towards the galley partition and then down securely in place.

The lounge seats are designed to carry passengers while the unit is in motion and are equipped with seat belts installed for their protection. All passengers must be seated in these seats and the front captain's seats only with seat belts fastened while unit is in motion. All other seats are not to be occupied while unit is in motion.

The lap belts must be worn across the hips and not across the abdomen. Passengers must sit well back in the seat and in an upright position.

### **C.0. APPLIANCES**

See appropriate component manufacturer's owner's manuals for operating instructions.

4.

## **D.0. WASHROOM/PRIVACY AREA**

### **D.1. PRIVACY DOORS (Versatile or Independent models)**

When privacy is required, disengage the barrel bolt and open the right privacy door. Then, release the hook located on the under side of the shelf above the toilet and open the left privacy door until it is parallel with the galley partition. Next, release the plastic turn tabs that secure the inner doors and extend these doors until privacy is achieved. The doors can be secured in this position by the plastic turn tabs located on the galley partitions. Complete privacy can now be achieved by closing the curtain at the galley window. If desired, the privacy doors can be extended from the outside and secured using the plastic turn tabs located on the inner doors.

When the privacy doors are returned to a closed position, ensure that the hook and barrel bolt are secured to prevent the doors from opening while travelling.

### **D.2. PRIVACY DOORS (Popular model)**

When privacy is required follow these steps. First, open the door on the suspended cupboard on the curbside of the unit. Second, open the door on the suspended pantry on the roadside of the unit and secure the hook located on the cupboard door to the pantry door. Ensure that the curtains are hanging from the lower edges of these doors to maintain privacy. Third, depress the finger catch located on the lower right edge on the left privacy door and open the door slightly. Fourth, release the plastic turn tab that secures the front door. Fifth, simultaneously extend both portions of the door across the aisle to the gable between the stove and the wardrobe. And finally, secure the hook located on the door to keep it in place.

### **D.3. TOILET**

See appropriate component manufacturer's owner's manuals for operating instructions.

### **D.4. SHOWER/WARDROBE (Independent model)**

If your unit is equipped with a shower, the wardrobe can be used without any instructions.

To set up the shower, follow these steps. First, convert the dinette into a double bed (see B.1.) or remove the table. Second, open both privacy doors (with the rear door extending out over the bed). Third, fold down the upper portion of the tub cover. Fourth, using both hands, lift the tub cover simultaneously up and away from the tub and then down until it rests vertically against the end of the tub. Fifth, with the clothing rack and shelf contents in place and while supporting the weight of the clothing, disengage the barrel bolt located at the left of the clothing rack on the underside of the shelf and swing the entire rack and shelf out over the bed. Sixth, release the shower curtain straps and extend the curtain around the shower stall along the curtain rod. Seventh, secure the shower curtain at either end using the velcro fasteners located at the top and bottom edge of the curtain.

To put away the shower, follow these steps. First, rinse and dry the shower curtain and stall thoroughly. (This function is most easily performed before leaving the shower stall after use.) Second, follow the above instructions for shower set up in reverse order.

## **E.0. POTABLE WATER SYSTEM**

Your unit is equipped with a potable water system for either completely self contained or dependent use. During self contained use, caution should be taken so as to minimize water consumption. For example, water consumption can be reduced while showering if you turn off the shower between wetting yourself down and rinsing yourself off.

To avoid damage due to road vibrations, be sure not to store heavy or sharp objects where they may come into contact with either the water lines or pump. Also, allow sufficient room around the pump to allow proper operation.

## **E.1. FRESH WATER TANK(S)**

The fresh water tank(s) can be filled either through the tank drain or through the gravity fill. The tank drain is located on the vehicle underside directly below the passenger door post. The gravity fill is located in the passenger door step well on units equipped with a single fresh water tank and in the passenger door post on units equipped with either double or triple tanks.

To fill the tank(s), first ensure that the one-way shut-off valve, located behind the tank drain, is closed. The shut-off valve is closed when the handle is perpendicular to the water line and it is open when the handle is parallel to the water line. (In the closed position, the shut-off valve will only prevent water from draining out the tank drain. It will not prevent water from entering the tank through the drain.) Second, remove the cap from the tank drain, attach a hose and open the shut-off valve. Third, if the gravity fill is located in the passenger door step well, open the door. If the fill is located in the door post, keep the door closed so that the rubber door seal will direct the overflow outside. Fourth, use only a moderate pressure to fill the tank(s). (Excessive pressure will result in unnecessary strain on the system.) When the tank is full, water will overflow through the gravity fill. At this point, discontinue pressure from the water source, close the shut-off valve and remove the hose. Replace the cap on the tank drain.

The tank(s) can be filled directly through the gravity fill. To fill the tank(s) using the gravity fill, open the passenger door and open the gravity fill cover. Insert the hose and fill the tank(s) using moderate pressure. (Excessive pressure will result in uncontrolled spillage out the gravity fill.) Once again, when the tank(s) is full, water will overflow through the gravity fill.

## **E.2. CITY WATER CONNECTION**

To connect the water system to an outside source, follow these steps. First, ensure that the water pump is turned off. Second, connect the hose to the city water connection. Before opening the outside water source, be sure all interior water outlets are closed to prevent spillage. Third, open the water source moderately to prevent excessive water force inside the unit. (To protect your system from excessive pressure from water supply systems encountered in some areas, a water pressure regulator should be used.) Note that this connection bypasses the water pump and fresh water tank(s). Therefore, the use of these items is not necessary when connected directly to an outside source.

To disconnect the city water connection, follow these steps. First, turn off the outside water source. Second, open the sink faucet to relieve the pressure in the system (failure to do so may result in an unexpected shower). Third, remove the hose from the city water connection and replace the cap.

6.

### E.3. WASTE WATER STORAGE AND DUMPING SYSTEM

Your unit is equipped with a waste water storage and dumping system that will provide adequate and effective storage and dumping of waste water. Your unit should be as level as possible to allow optimal operation of the system.

#### a. Waste Tank Preparation

Your unit is equipped with two waste water tanks; the grey water tank is for waste water from the sink and shower (if equipped) and the black water tank is for sewage from the toilet. Both tanks are equipped with separate dump valves so that each may be dumped independently. Before use of either waste tank, be sure to read instructions provided by the toilet manufacturer regarding waste water chemicals.

#### b. Waste Tank Dumping

Waste water tank contents must be dumped in authorized facilities only. To completely clear the waste water tanks of all solid material, tanks should be full to provide the necessary volume required for complete dumping. If you wish to dump a partially full tank, it is advisable to fill the remaining volume with water first. Also, to completely clear the tanks of all solid material, tanks should be dumped immediately after road travel while tank contents are still unsettled.

To dump the black water tank, follow these steps. First, ensure that the black water dump valve (black) located on the lower curbside of the unit is closed (in position). Second, on the roadside of the unit, remove the sewage hose assembly cover. Third, connect the dump fitting (stored behind the exterior utility door in the power cord storage compartment) to the end of the assembly. Fourth, remove the small cap located on the right side of the assembly and swing up the support arm so that the assembly can be pulled out. Fifth, replace the cap on the assembly and securely place the fitting and assembly in the local waste receptacle. Sixth, on the curbside of the unit, pull the black water dump valve to dump tank contents. Seventh, once the tank is empty, close the dump valve, return the assembly to its support structure, remove the fitting and ensure that all caps and supports are securely in place.

To dump the grey water tank, follow the same procedure. Be sure to dump the grey water tank last so as to help flush out any solid waste in the sewage hose from the black water tank. If desired, flush both waste tanks after dumping.

#### c. Waste Tank Flushing

To flush the waste water tanks, follow these steps. First, ensure that both tanks are empty (see above). Second, fill the black water tank using the toilet and the grey water tank using the sink. Third, dump both tanks using the procedure outlined in section E.3.b. Both waste water tanks can be flushed using a similar procedure, but rather than filling each tank using the potable water system, they can be filled by inserting a hose directly into the sink and toilet.

### E.4. WATER SYSTEM DRAINING

To completely drain the fresh water system of all water, follow these steps. First, ensure that the water pump is off and that the unit is level. Second, drain the fresh water tank(s) by opening the tank drain and its shut-off valve. Third, remove the threaded cap on the city water low point drain (located behind the city water connection). Fourth, open the sink faucet and turn on the water pump until water is no longer pumped. Fifth, turn off the water pump. Sixth, open all water outlets including the sink faucet, shower faucet (if equipped) and toilet flushing lever. The latter can be propped open or opened manually several times. This procedure allows gravity to draw any remaining water out through the tank and city water drains. If this procedure is followed, it is unnecessary to blow out the water system. Once the system is drained, be sure to replace the tank and city water drain caps before driving.

To completely drain the waste water system, disconnect and drain the P-traps of the sink and shower (if equipped). (Shower P-trap is located on the vehicle underside to the rear of the waste water tanks.) Then dump the waste water tanks as outlined in E.3.b.

#### **E.5. POTABLE WATER SYSTEM SANITIZING**

Your potable water system should be sanitized after long periods of non-use or after any suspected contamination.

To sanitize your system, fill the fresh water tank(s) (see E.1.) with a solution of 4 ml (1 tablespoon) of baking soda per litre (gallon) of water. Turn on the water pump and open the sink faucet and shower faucet (if equipped) and toilet flushing lever to fill the entire system with the solution. Let the solution remain for several hours, then drain the system completely (see E.4.) and fill with fresh water.

#### **E.6. WINTER USE**

We recommend that you do not use the potable water system during freezing weather and ensure that it is properly drained (see E.4.) before the temperature falls below freezing. As an alternative, use portable water containers and approved anti-freeze in the waste water tanks.

If use of the water system is necessary under freezing conditions, be sure to use an approved non-toxic recreational vehicle anti-freeze suitable for potable water systems. Be sure to follow the manufacturer's instructions carefully to ensure that damage to the system or injury to yourself will not occur.

#### **F.0. ELECTRICAL SYSTEM**

Your unit's electrical system should not be subjected to changes and/or additions to circuitry, appliances, etc. without consulting your dealer for proper installation procedures.

#### **F.1. 110/12V CONVERTER/CHARGER**

See appropriate component manufacturer's owner's manuals for operating instructions.

#### **F.2. CITY ELECTRICAL CONNECTION**

Your unit is equipped with a heavy duty 30 amp. power cord so that you can connect your electrical system to an outside 110V (in Canada) or 120V (in U.S.) power source. The power cord and a 30 to 15 amp. adaptor are stored in the power cord storage compartment located behind the exterior utility door.

When connecting your system to an outside source, ensure that a properly equipped (three pronged) and functioning receptacle is used. If any type of spark or shock is detected, disconnect from the source immediately and do not reconnect until the problem is corrected.

8.

### F.3. AUXILIARY BATTERY

The auxiliary battery is located below the rear roadside captain's seat or lounge seat. Access to same can be achieved from within the unit through an access door in the floor.

For an explanation of the operation of the auxiliary battery and isolator, see the owner's manual for the converter/charger.

### F.4. MONITOR PANEL

A monitor panel is provided to monitor the fluid levels in the fresh, grey and black water tanks and charge level in the auxiliary battery. (Be aware that the panel does not always reflect actual fluid levels. For example, when the 1/3 level light is on, the tank may be anywhere from 1/3 to just under 2/3 full. Or when the panel reads empty, the tank may be anywhere from empty to just under 1/3 full.)

The panel also provides the switch from the water pump. It is located on the front closet gable above the right lounge seat.

## **G.0. LP GAS AND SAFETY SYSTEM**

Your unit is equipped with an LP gas system which, when properly handled and maintained, will provide trouble and worry free operation of your LP gas fueled appliances.

LP fuel is stored in a liquid form under extremely high pressure within a tank located below the floor accessible through the exterior utility door. As fuel is used, LP gas passes from the top of the tank through the regulator into the gas lines and eventually to the appliances.

Although the entire system has undergone extensive factory and dealer testing for leaks, the system's connections and fittings are subjected to road vibrations and should therefore be periodically checked for possible leaks.

LP gas is extremely flammable, colourless, heavier than air and smells like garlic or rotten eggs.

**IF YOU SMELL GAS**, extinguish any open flames, pilot lights and smoking materials immediately. Do not touch any electrical switches. Shut off the gas supply at the tank valve. Open doors and windows to provide maximum ventilation. Leave the area until the odor clears. Have the system checked and the leak corrected before use.

**WARNING:** LP gas tanks shall not be placed or stored inside your unit. LP gas tanks are equipped with safety devices which relieve excessive pressure by discharging gas to the atmosphere.

**WARNING:** To reduce the danger of fire or explosion, do not store LP gas tanks, gasoline or other flammable liquids inside your unit.

## **G.1. APPLIANCES**

**WARNING:** It is not safe to use cooking appliances for space heating purposes.

Cooking appliances need fresh air for their safe operation. Because the amount of oxygen supply is limited due to the size of your unit, before operation of cooking appliances, open the overhead vent or a window or turn on the exhaust fan. Proper ventilation when using the cooking appliance(s) will reduce the dangers of asphyxiation. It is especially important that cooking appliances not be used for comfort heating purposes as the danger of asphyxiation is greater when the appliance is used for long periods of time.

**WARNING:** Portable fuel burning equipment, including wood and charcoal grills and stoves, shall not be used inside your unit. Use of this equipment inside your unit may cause fire or asphyxiation.

See appropriate component manufacturer's owner's manuals for operating instructions.

## **G.2. REFUELING PROCEDURES**

**WARNING:** Do not refuel LP gas tank to more than 80% of capacity.

A properly refueled LP gas tank will contain approximately 80% of its volume as liquid LP gas. Overrefueling of the LP gas tank can result in uncontrolled gas flow which can cause fire or explosion.

**WARNING:** The tank valve must be closed and all pilot lights and appliances turned off before refueling of LP gas tank or motor fuel tank. Only qualified personnel should refuel your LP gas tank.

10.

### G.3. REGULATOR

The LP gas regulator in your unit (located behind the exterior utility door) has been installed with the diaphragm vent facing downward and equipped with a protective cover. Ensure that the regulator vent always faces downward and that the cover is kept in place to minimize vent blockage which could result in excessive gas pressure causing fire or explosion.

### G.4. SMOKE DETECTOR

Your unit has been equipped with a smoke detection device for your protection. This device should be tested after each time the unit has been in storage, before each use, and at least once each week during the unit's use.

## H.0. WINTER STORAGE

### H.1. INSIDE YOUR UNIT

Before winter storage, be sure to clean your unit thoroughly. Special emphasis should be given to the appliances, such as the refrigerator. Once cleaned, leave the refrigerator door open to prevent the development of odors (insert a box of baking soda if desired).

Open a window slightly allowing sufficient air circulation to avoid the development of odors, condensation and mildew.

To prevent sun rays from deteriorating and fading interior fabrics, cover all upholstered seats and cushions. As a further precaution, close all drapes tightly.

### H.2. OUTSIDE YOUR UNIT

Ensure that all waste water tanks have been dumped and flushed (see E.3.) and that the entire potable water system has been properly drained (see E.4.).

Be sure to cover the external vents to the refrigerator, exhaust fan, furnace and air conditioner (if equipped) with heavy plastic sheeting to prevent entry by rodents and insects.

To improve tire life and maintain performance, put your unit up on blocks. Also, cover all tires exposed to sun light to prevent deterioration from ultra-violet rays.

Consult your local automotive dealer regarding steps necessary to prevent engine and chassis damage during long periods of storage in your particular region.

### H.3. SPRING START UP

After storage, re-activate your unit for use by reversing all the procedures that you performed to winterize it.

## I.0. WARRANTY

### I.1. DEFINITIONS

**Home & Park** **Home & Park Motorhomes** (A Division of HANMAR MOTOR CORPORATION)

**Dealer** Dealer or any wholesale buyer of recreational vehicles, authorized by **Home & Park Motorhomes**.

**Unit** Any recreational vehicle manufactured by **Home & Park Motorhomes**.

**Original Purchaser** Initial registered owner of the **Unit** and/or initial purchaser of the **Unit** from the **Dealer**.

All units are covered by a three part limited warranty:

### I.2. AUTOMOTIVE WARRANTY -

The current warranty offered by the Chrysler Motors (in U.S.) or Chrysler Canada Ltd. (in Canada) covering the manufacture of the Dodge chassis. All automotive service, maintenance and repairs are to be performed by any Chrysler, Dodge or Plymouth dealer. Items such as the above are not warranted by **Home & Park**.

**Home & Park** (in U.S.) or **Dealer** (in Canada) will restart this portion of the warranty under the **Original Purchaser's** name from the date of retail delivery using the information supplied on the **Home & Park Warranty Registration Card**. Accordingly, it is important that this card is completed and mailed promptly after the date of retail delivery.

### I.3. APPLIANCE WARRANTY -

Examples such as the following are not warranted by **Home & Park**, but are covered by individual warranties offered by their respective manufacturers to which terms both **Original Purchaser** and **Dealer** must comply: batteries, electrical convertors, refrigerators, stoves, toilets, water pumps, water heaters, furnaces and air conditioners. **Home & Park** makes no warranty whatsoever, regarding these items and/or such like components manufactured by others. **Original Purchaser** and/or **Dealer** are required to deal directly with the nearest service center for such manufactured components and abide by the warranty policy as allowed by such component manufacturers.

### I.4. HOME & PARK MOTORHOME WARRANTY -

**Home & Park** warrants to the **Original Purchaser** that the **Unit** is free from defects in material and workmanship on the portion manufactured by **Home & Park**, under normal use and service, for **two (2) years**, or **24,000 miles** (in U.S.) or **40,000 km** (in Canada) whichever occurs first, from date of purchase by the **Original Purchaser**.

This warranty shall be fulfilled at the **Home & Park** factory or at an authorized **Dealer** (see Owner's Manual and Warranty). **Home & Park** will, at its option, replace or repair, free of charge (including related labour) any defective part, about which the **Original Purchaser** shall notify **Home & Park** or the **Dealer** within the warranty period. This obligation of **Home & Park** under this warranty, is expressly limited to such replacement or repair. The provisions of this warranty shall not apply to accident, nor to unauthorized repairs or alterations, nor to normal maintenance, nor to normal deterioration due to wear and exposure.

12.

This warranty is expressly in lieu of any other expressed or implied warranty, including any implied warranty of merchantability or fitness for a particular purpose and of any other obligations or liabilities on **Home & Park** which neither assumes nor authorizes any other person to assume for it any other liability in connection with **Unit** manufactured by it.

#### 1.5. CONDITIONS

Home & Park Motorhome Warranty is void unless the following conditions are adhered to:

- a. Warranty protection is to the **Original Purchaser** only and does not apply to rental Units.
- b. Warranty Registration Card on each **Unit** must be completed by the **Original Purchaser** and mailed to **Home & Park** within 30 days from date of retail sale. When warranty applications are made and Registration Card is not on file at **Home & Park**, reimbursement of claim will be delayed until proof of original purchase is submitted to **Home & Park**.
- c. Warranty applications that will exceed \$100.00 must first be authorized by **Home & Park** before proceeding with such work.
- d. There shall be no allowance for emergency road repair, towing, labour, meals, accomodations, etc. Such will not be accepted if claimed on warranty.
- e. Components for which no service centre exists may be returned to **Home & Park** or to another service location authorized by **Home & Park** for repair or replacement. Shipments arriving at our factory without prior explanation will be returned to sender.
- f. Only parts and accessories and other material, available through **Home & Park** are to be used in the performance of warranty service.
- g. All defective parts replaced under warranty **MUST BE RETURNED** to **Home & Park** before reimbursement will be made.

#### 1.6. OWNER RESPONSIBILITY

After pre-delivery check by the **Dealer**, items such as appliance adjustments, light bulbs and window screens are not covered by **Home & Park** under warranty

**J.0. EMERGENCY PHONE NUMBERS**

The following home phone numbers are to be used in the event of an emergency outside of normal business hours:

<u>DEPARTMENT</u>	<u>NAME</u>	<u>PHONE NUMBER</u>
Warranty/service	Ray Wickham	(519)579-6474
	Ben Spengen	(519)743-1758
Sales General	Ted Fitzgerald	(519)741-5104
	Ted Klaver	(519)745-9014
	Jeff Hanemayer	(519)578-0094

**K.0. ADDRESS, PHONE AND FACSIMILE NUMBERS**

Address all inquiries to:	Home & Park Motorhomes 75 Ardelt Place Kitchener, Ontario N2C 2C8	TEL (519)745-1169 FAX (519)745-1160
---------------------------	--	--

---

NOTES

